

NEW CODE READER2使用说明 New code reader2 user manual



这个白色的是老版本的软件【备用光盘】 This white is old version software(standby cd)




这个【new install】是最新软件 This one is [new install] it is the newest software

使用说明 Installation manual


1插入cd new install 1. Put new install CD into computer



2打开软件复制软件到电脑的D盘 2. Open software and copy it to your computer D://

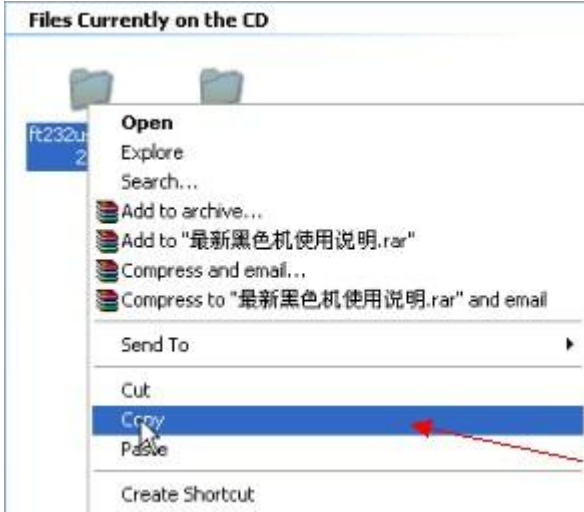


3打开NEW CODE READER2软件 Open NEW CODE READER2 Software.

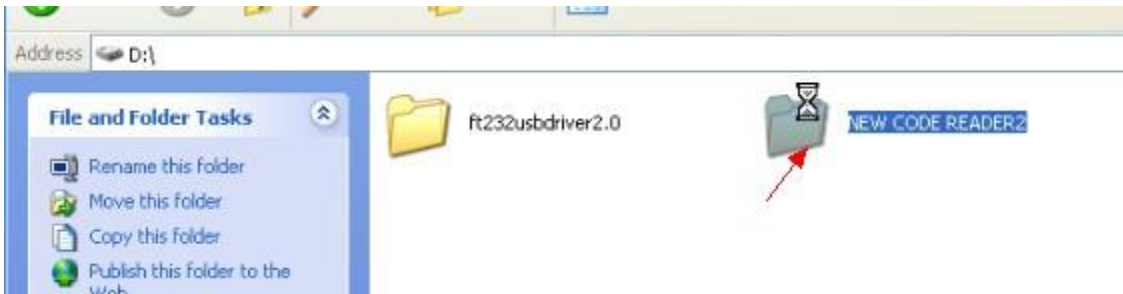

4把CODE READER2软件发送到桌面 生产快捷软件
shortcuts of the software.

Send Code reader2 software to the desktop, and crate a

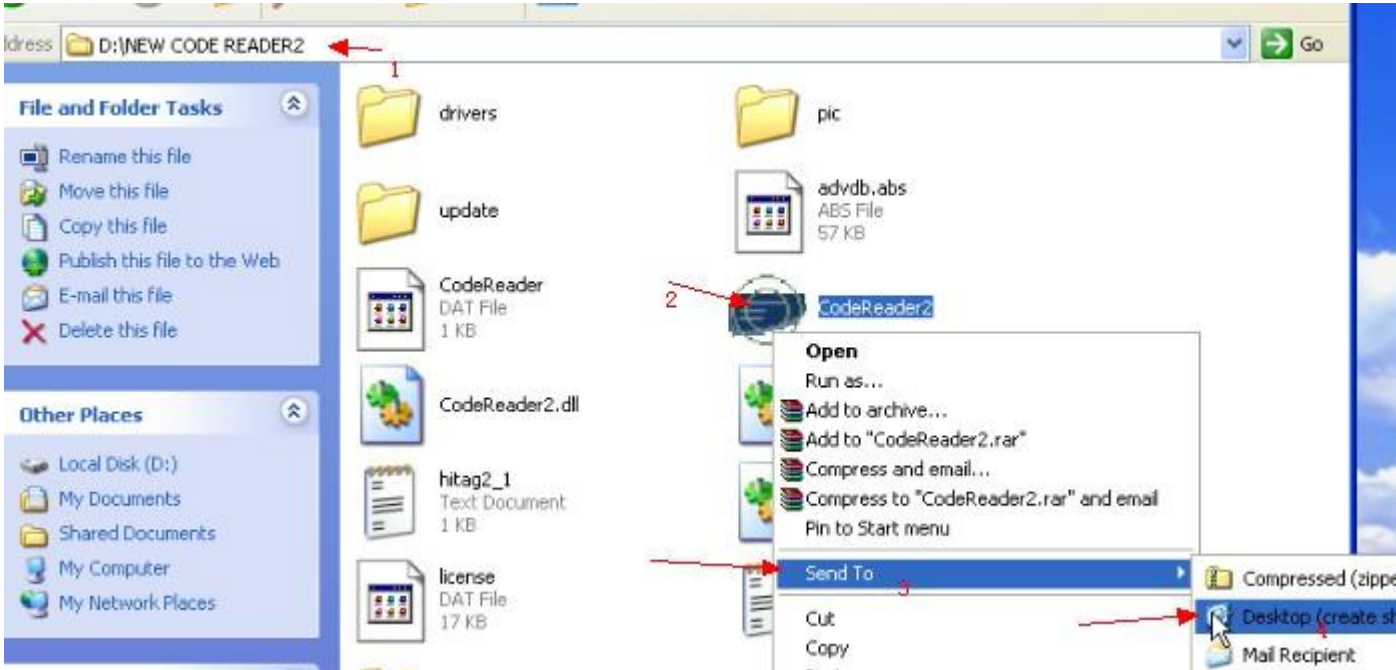


5打开桌面的CODE READER2软件

Opel the shortcuts of the code reader2 software on the desktop.




6进入CODE READER2 软件的设置 选择com接口

Enter code reader2 software setting, Choose com port.

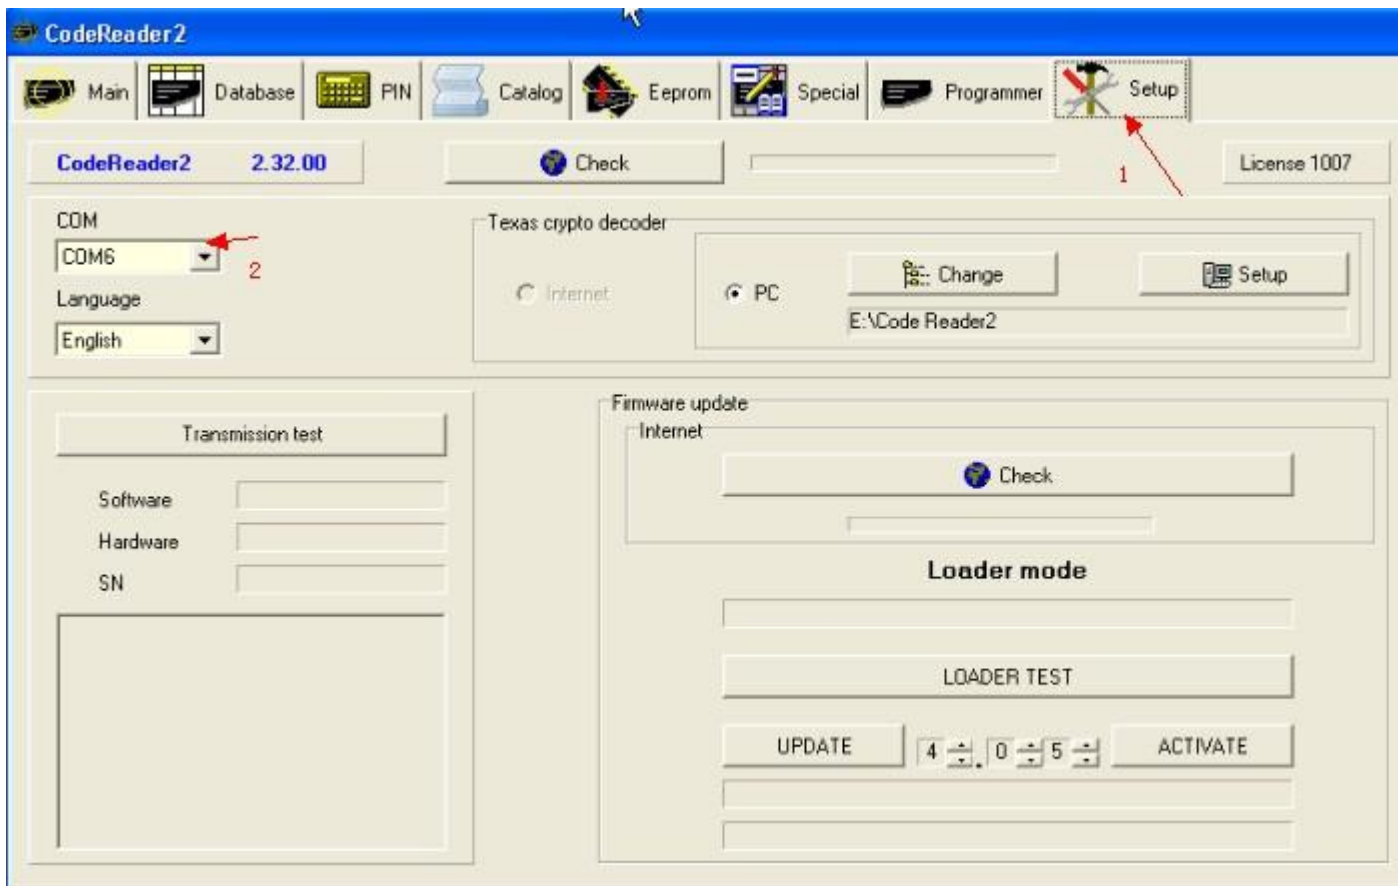

7 电脑端口和软件端口要一致 Computer comport need to be same as software comport.

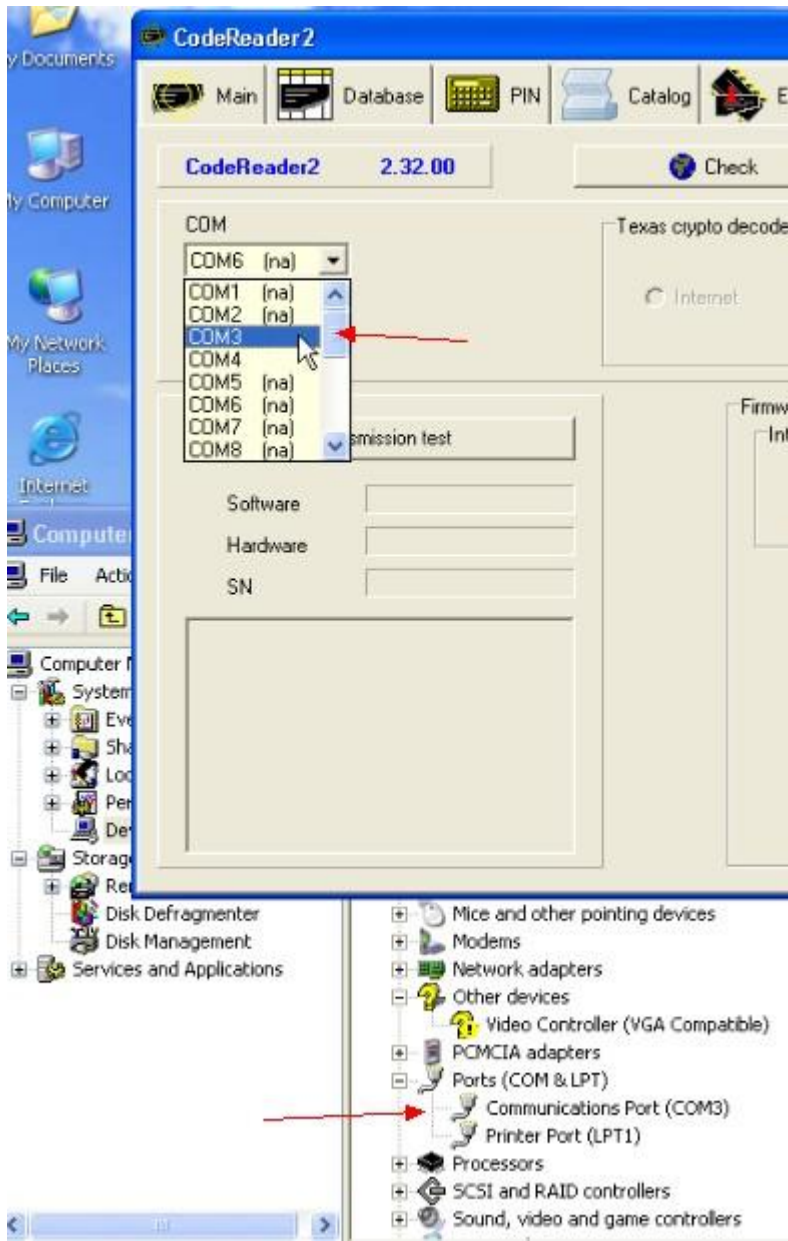

8连接设备 接电脑 Connect device and computer.




9 开机登录钥匙放入 Start the machine and put the key in the machine.




10机器登录成功 Machine login successfully.



11机器连接认证通过 Machine past verify.

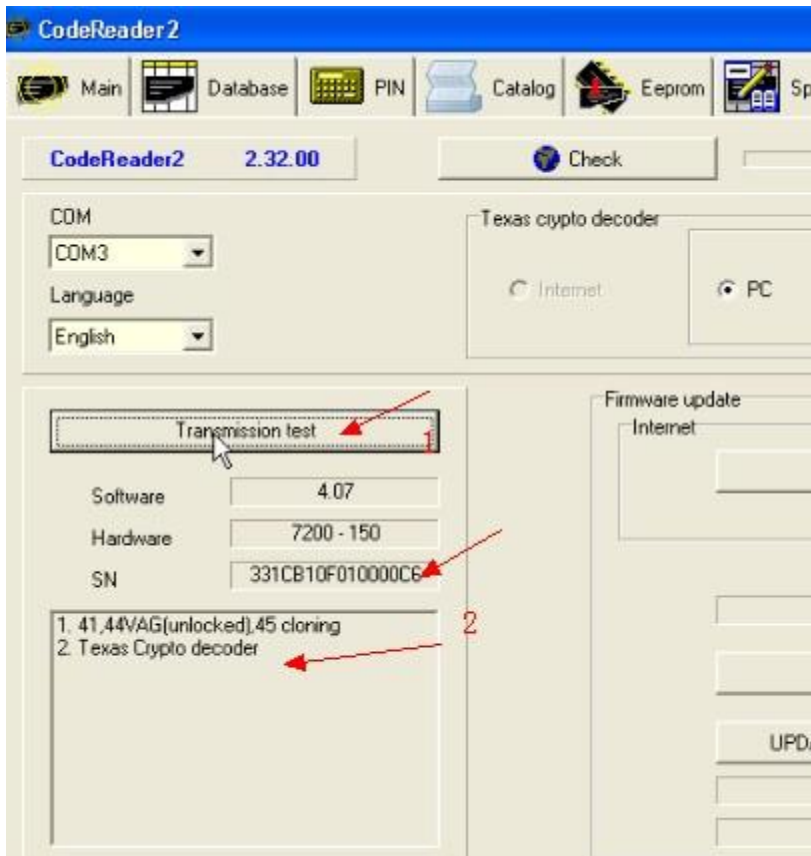


12钥匙测试. 读取钥匙. 拷贝钥匙 Key test, read key and copy key.

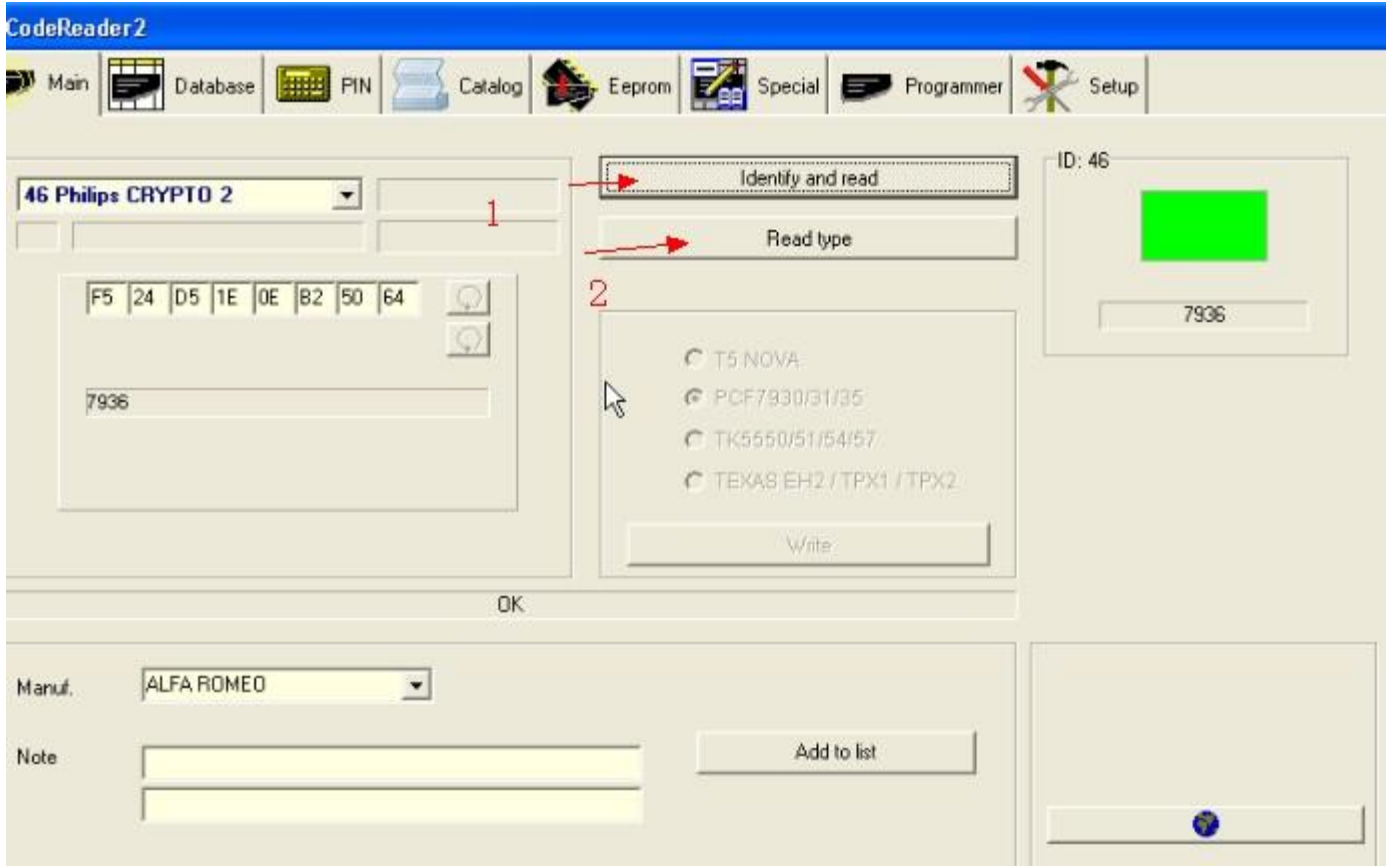


13 如果要拷贝4D的钥匙 电脑要连接移动硬盘 If you want copy 4D key, computer need connect with the hard disk we provide.



14 移动硬盘4d数据的设置选择change Hard disk read 4D data and choose setting to change.

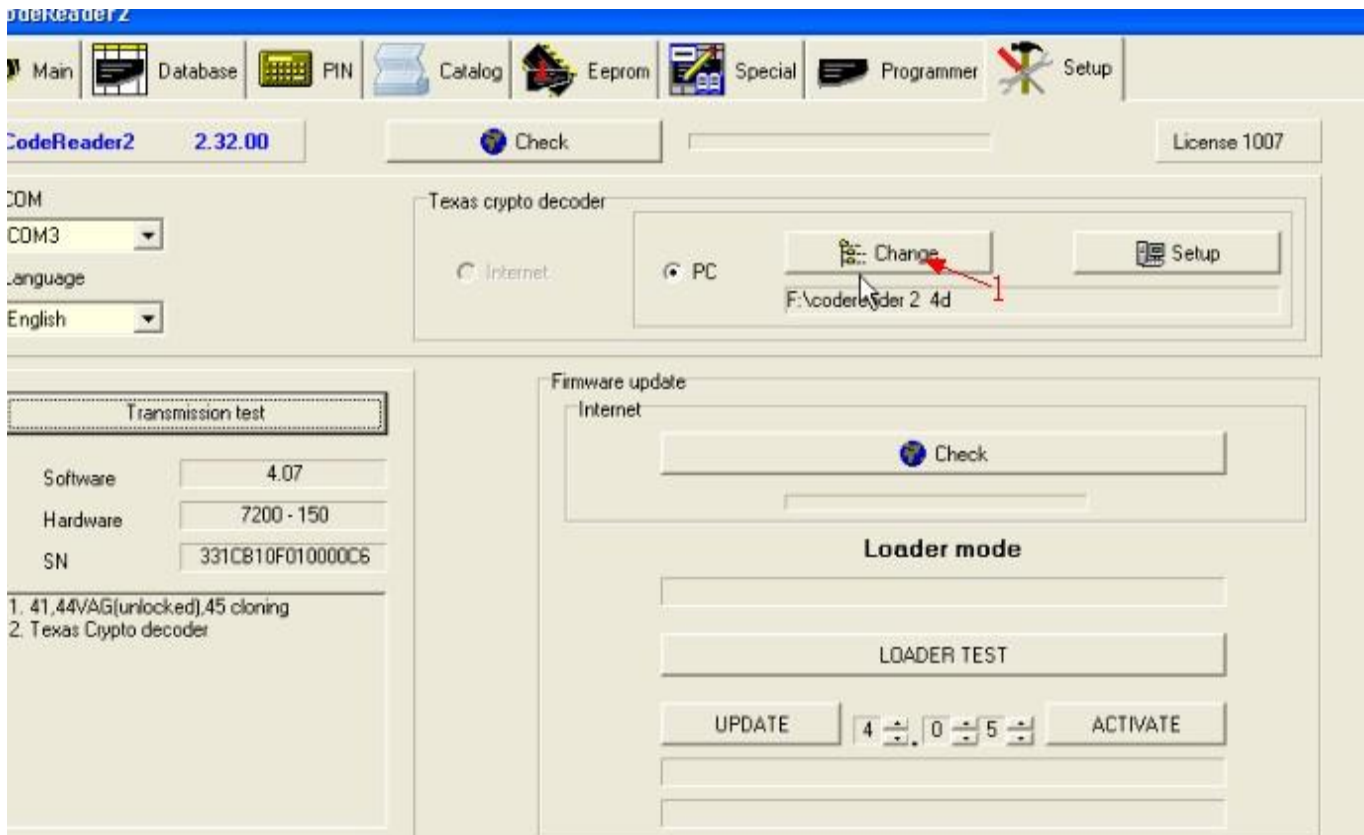

15 选择4d数据所在的硬盘 选择好数据 最后确定数据 ok Choose where the 4D data located and choose enter.

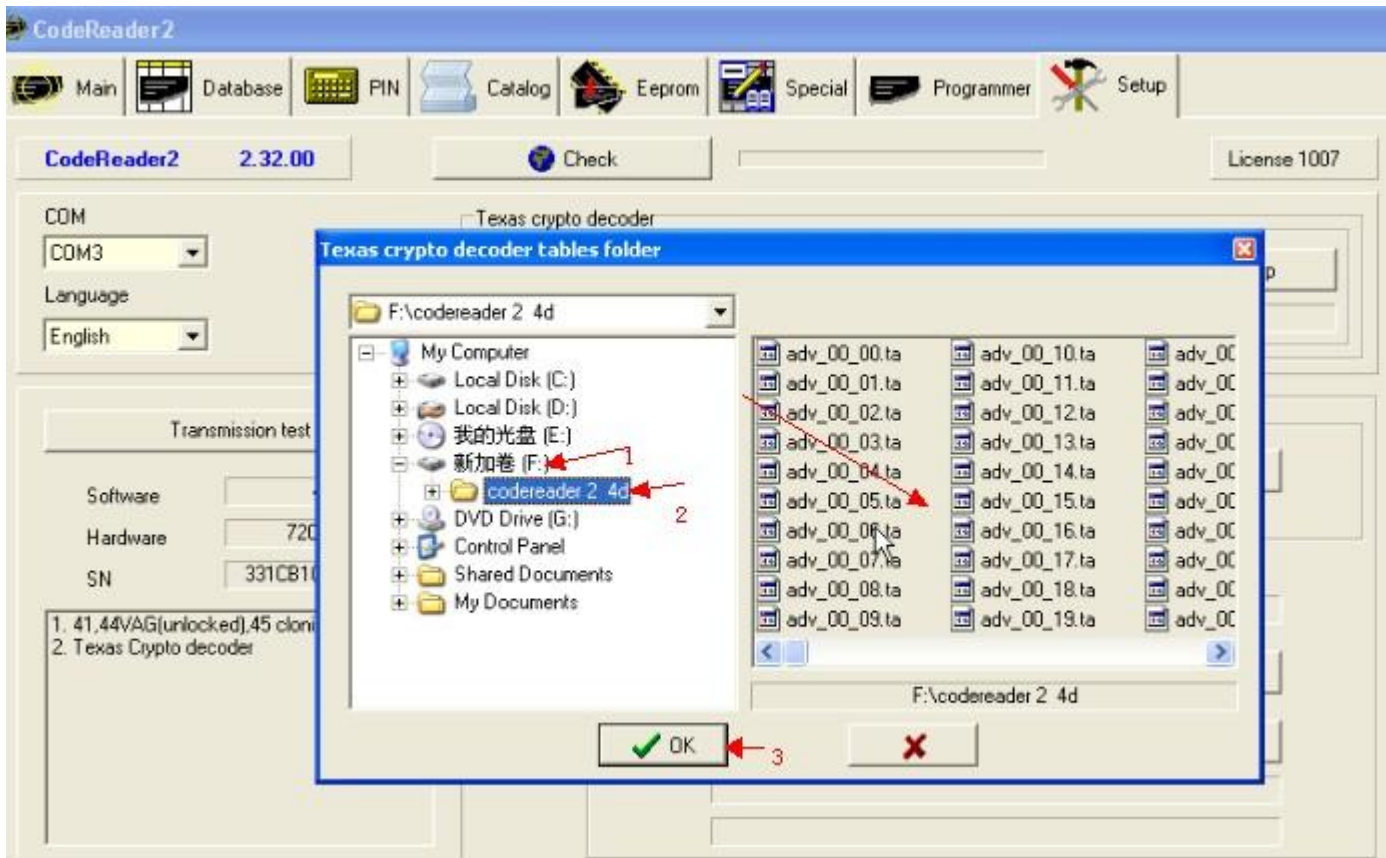

16 现在可以读取 拷贝 4d芯片的钥匙了 Now you can read and copy 4D chip key.